


## NCR RealPOS 62

Release 2.0

# Hardware User's Guide

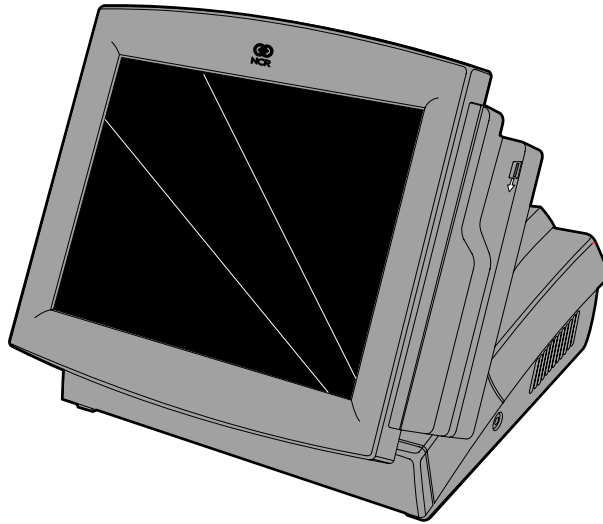

B005-0000-1481

Issue C

---

# Table of Contents

## Chapter 1: Product Overview

Introduction .....	1-1
Serial Number Labels .....	1-2
Hardware Modules.....	1-3
Base Unit .....	1-3
Hardware Options.....	1-4
Terminal Components not Supported .....	1-5
System Configuration Diagram .....	1-6
Hardware Module Descriptions .....	1-7
Processor Board .....	1-7
Processor/Chip Set .....	1-7
Video Subsystem.....	1-7
Ethernet 10/100Base-T LAN Communications .....	1-8
Universal Serial Bus .....	1-9
Serial Ports .....	1-9
Parallel Port.....	1-10
PS/2 Keyboard and Mouse Interface .....	1-10
Hardware Monitor .....	1-10
Mini PCI Expansion Header .....	1-11
IDE Header .....	1-11
Processor Board Connectors .....	1-11
MSR.....	1-11
Graphics Subsystem.....	1-12
Board BIOS.....	1-12
Operator Display .....	1-14
LCD Adapter Board.....	1-14
LCD Backlight Inverter Module.....	1-14

Operator Touch Screen.....	1-15
NCR 7460 Integrated Customer Display.....	1-15
Hardware Features .....	1-16
Magnetic Stripe Reader .....	1-16
Printer Options .....	1-17
NCR 7167 Printer .....	1-17
NCR 7197 Printer .....	1-18
7196 Printer .....	1-18
Customer Displays .....	1-19
NCR 5974 Remote 4x20 Customer Display .....	1-19
NCR 5973 International VFD Customer Display.....	1-20
Cash Drawers.....	1-21
2189 Cash Drawer .....	1-21
Other Cash Drawers .....	1-21
Third-Party Cash Drawers.....	1-21
Other Integrated Devices and Indicators .....	1-22
Hard Disk Drive .....	1-22
Power Status LED .....	1-22
LAN Status LEDs .....	1-23
Power Supply .....	1-23
NCR Power Management .....	1-23

## **Chapter 2: Hardware Installation**

Introduction .....	2-1
Installation Summary.....	2-1
Installation Restrictions.....	2-2
Connecting the Cables.....	2-3
Accessing the Cable Connectors and Routing Cables.....	2-3
Cable Connectors.....	2-4
Terminal Cable Connectors .....	2-4
Operator Display Cable Connectors.....	2-5

---

Installing Peripherals.....	2-6
Installing a Transaction Printer .....	2-6
USB Printer Installation.....	2-7
RS-232 Printer Installation .....	2-8
Installing a Remote Customer Display.....	2-9
Installing a Cash Drawer .....	2-11
Installing a Keyboard and Mouse.....	2-12
Installing a Serial Mouse .....	2-13
Calibrating the Touch Screen .....	2-14
Calibration Using TouchWare (Windows) .....	2-15
Calibration Using Microcal (DOS) .....	2-18
Noise Check Utility .....	2-18
Summary .....	2-19
Double-Touch Condition.....	2-19
MSR Cleaning Cards .....	2-20
Out-of-Box Failures.....	2-20
Powering Down the Terminal.....	2-20

### Chapter 3: BIOS Setup

Introduction .....	3-1
Entering Setup Using a Keyboard.....	3-1
Entering Setup Using the Touch Screen.....	3-1
How to Select Menu Options.....	3-2
Restoring Factory Settings.....	3-2
BIOS Default CMOS Values.....	3-2
Main Values .....	3-3
Advanced Menu .....	3-4
Security Menu.....	3-9
Power Menu.....	3-9
Boot Menu .....	3-9

**Chapter 4: Operating System Recovery**

Introduction .....	4-1
Prerequisites .....	4-1
Updating Procedures .....	4-2
Completing the OS Installation (Win2000) .....	4-4
Completing the OS Installation (WinNT) .....	4-5
Completing the OS Installation (Win98) .....	4-5
Completing the OS Installation (DOS) .....	4-6
Gold Disk Contents .....	4-7
Microsoft Operating System License Agreements .....	4-7
Migrating Operating System Images from 7460 1.x Terminals .....	4-8
NCR 7460 Win 2000 Operating System Recovery Software (LPIN: D370-0562-0100) .....	4-8
Installed Software .....	4-8
Uninstalled Drivers .....	4-9
Settings and Revisions .....	4-9
NCR 7460-NT Operating System Recovery Software (LPIN: D370-0561-0100) .....	4-10
Installed Software .....	4-10
Uninstalled Drivers .....	4-10
Settings and Revisions .....	4-11
NCR 7460-Win98 Operating System Recovery Software (LPIN: D370-0559-0100) .....	4-12
Installed Software .....	4-12
Uninstalled Drivers .....	4-12
Settings and Revisions .....	4-13
NCR 7460 DOS Operating System Recovery Software (LPIN: D370-0499-0100) .....	4-13
OS Recovery from a Larger Disk Image .....	4-14

---

**Chapter 5: BIOS Updating Procedures**

Introduction .....	5-1
Prerequisites .....	5-1
Updating Procedures .....	5-2
BIOS Crisis Recovery .....	5-5
Recovery Procedures .....	5-6
Cable/Connector Pin-Out Information .....	5-8

**Chapter 6: Integrated 2x20 Customer Display**

Introduction .....	6-1
Viewing Area .....	6-1
Diagnostics .....	6-1
Command Descriptions .....	6-2
Structure/Logic Description .....	6-2
Integrated Display Interface .....	6-2
Instructions .....	6-4
Clear Display .....	6-4
Cursor Home .....	6-5
Entry Mode Set .....	6-5
Display On/Off Control .....	6-6
Cursor/Display Shift .....	6-6
Function Set .....	6-7
CGRAM Address Set .....	6-7
DDRAM Address Set .....	6-8
Address Counter Read .....	6-8
DDRAM or CGRAM Write .....	6-8
DDRAM or CGRAM Read .....	6-9
Reset Conditions .....	6-9
Initialization .....	6-10
Character Map (VFD) .....	6-11
Character Map (LCD) .....	6-12

### Appendix A: Cables

Printers .....	A-3
7167, 7197 Printer (RS-232) .....	A-3
7167, 7197 Printer (USB) .....	A-3
7196 Printer (RS-232) .....	A-4
Cash Drawers .....	A-4
Cash Drawer, Extension Cable .....	A-4
Keyboard PS/2 Y-Cable .....	A-5
5964 to 7460 (RS-232/PS2/Power) .....	A-5
Remote Customer Display .....	A-6
5972 VFD (Parallel) .....	A-6
5972 VFD (RS-232) .....	A-6
5973/5974 International VFD (Parallel) .....	A-7
Operator Display Cable (DVI to DVI) .....	A-7
5945/5992 Cable (RS-232) .....	A-8
Ethernet 10/100BaseT Cable .....	A-8
Power Cables .....	A-8
AC Power .....	A-8

### Appendix B: Kits

### Appendix C: Technical Specifications

Interrupt Defaults .....	B-1
DMA Channel Defaults .....	B-2
Memory Map .....	B-3
I/O Map .....	B-4

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*